

# **Basic Proto Cape**

#### Descriptions

The Basic Proto Cape is designed to break out 26 signals from the expansion headers of the BeagleBone Black including GPIO, I2C, SPI, UART, PWM, analog inputs, +5V, +3V3, and +1.8V (analog). These signals can be accessed via a 26-pin male header.



### Software Support & Compatibility

All revisions are compatible with BeagleBone and BeagleBone Black. There is a device tree overlay associated with this cape and can be loaded by follow:

echo "cape-bone-proto" > /sys/devices/bone\_capemgr.\*/slots

To have the device tree file loaded on startup:

sudo sh -c "echo CAPE=cape-bone-proto >> /etc/default/capemgr"

Then reboot the system.

#### Specifications

Followings are some specifications of the Basic Proto Cape:

## **Mechanical Specifications**

Size	2.15" x 2.825"
Layers	2
PCB Thickness	.062"
RoHS Compliant	Yes