

Insert one or two SIM cards and a microSD card, if any.



Use either our ACC-PS2x-F power adapter or your own power adapter* with our ACC-CA10 or ACC-CA10-F power cord.

2

Attach our:


✓ ACC-A21 antenna to the leftmost antenna connector (labelled Wi-Fi), if needed; and
✓ ACC-A32H or A33 to the second leftmost and to the two rightmost antenna connectors (labelled

Cellular Main, GNSS and Cellular Diversity).



Plug:
✓ a serial cord into E210 series' 9-pin female sub-D header; and / or
✓ one or two Ethernet cords into its RJ-45 headers.

E214G QUICK START GUIDE

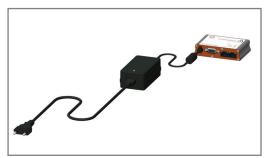

* Provided its output voltage fell inside E210 series' 8 V ~ 32 V range



© 2019 Lantronix, Inc. Lantronix is a registered trademark of Lantronix, Inc. All other trademarks are the property of their respective owners. Specifications are subject to change without notice. All rights reserved. 895-0008-00 Rev. A