

Tooling

Crimp Tool Table

Crimp contacts

Contact size	Shell type	Part number*		Crimp tooling	Locator	Extraction tools
		Male	Female			
#22 Ø 0.7 mm	0	JBX0CTMC07	JBX0CTFC07	MIL - 22520/7-01	JBX00UTLP07	JBXOUTDC07
	1	JBX1CTMC07	JBX1CTFC07			
	2	JBX2CTMC07	JBX2CTFC07			
	3	JBX3CTMC07	JBX3CTFC07			
#20 Ø 0.9 mm	0	JBX0CTMC09	JBX0CTFC09	MIL - 22520/7-01	JBX00UTLP09	JBXOUTDC09
	1	JBX1CTMC09	JBX1CTFC09			
	2	JBX2CTMC09	JBX2CTFC09			
	3	JBX3CTMC09	JBX3CTFC09			
#18 Ø 1.3 mm	1	JBX1CTMC13	JBX1CTFC13	MIL - 22520/7-01	JBX10UTLP13	JBXOUTDC13
	2	JBX2CTMC13	JBX2CTFC13			
	3	JBX3CTMC13	JBX3CTFC13			
#16 Ø 1.6 mm	2	JBX2CTMC16	JBX2CTFC16	MIL - 22520/1-01	JBX20UTLP16	JBXOUTDC16
	3	JBX3CTMC16	JBX3CTFC16			
#14 Ø 2.0 mm	2	JBX2CTMC20	JBX2CTFC20	MIL - 22520/1-01	JBX20UTLP20	JBXOUTDC20
	3	JBX3CTMC20	JBX3CTFC20			

* Part numbers for removal contacts only

Contact extraction instruction

Place the tool into the cavity from front face of the insulator push on the handle, then remove the contact.

