

Switching Regulator Series

Step-Down DC/DC Converter BD9E300EFJ Evaluation Board

BD9E300EFJ-EVK-001

Description

BD9E300EFJ-EVK-001 Evaluation board delivers an output 5.0 volts from an input 7.2 to 33 volts using BD9E300EFJ, a synchronous rectification step-down DC/DC converter integrated circuit, with output current rating of maximum 2.5A. The output voltage can be set by changing the external parts of circuit and the loop-response characteristics also can be adjusted by the phase compensation circuit.

Performance specification (These are representative values, and it is not a guaranteed against the characteristics.)

| Parameter | Min | Тур | Max | Units | Conditions |
|------------------------------|---------------------------------------|------|-----------------------|---------|-----------------------|
| Input Voltage Range | 7.0 ^(NOTE1) | | 36 ^(NOTE2) | V | |
| Output Voltage | | 5.0 | | V | R1=12kΩ, R2=3kΩ |
| Output Voltage Setting Range | V _{IN} ×0.15 ^(NO) | TE3) | V _{IN} ×0.7 | V | |
| Output Current Range | 0 | | 2.5 | А | |
| Loop Band Width | | 31.6 | | kHz | |
| Phase Margin | | 76.5 | | degrees | |
| Input Ripple Voltage | | 100 | | mVpp | I _O = 2.5A |
| Output Ripple Voltage | | 30 | | mVpp | I _O = 2.5A |
| Output Rising Time | | 3.5 | | ms | |
| Operating Frequency | | 1.0 | | MHz | |
| Maximum Efficiency | | 84.7 | | % | I _O = 0.9A |

V_{IN} = 24V, V_{OUT} = 5.0V, Unless otherwise specified.

(NOTE1) When the output voltage is 5.0V, it is 7.2V by limiting ratio of the maximum duty.

(NOTE2) When the output voltage is 5.0V, it is 33V by limiting ratio of the minimum duty.

(NOTE3) However, $(V_{IN} \times 0.15) \ge 1.0V$

Operation Procedures

- 1. Necessary equipments
 - (1) DC power-supply of 7.2V to 33V/2.5A
 - (2) Maximum 2.5A load
 - (3) DC voltmeter

2. Connecting the equipments

(1) DC power-supply presets to 24V and then the power output turns off.

- (2) The max. load should be set at 2.5A and over it will be disabled.
- (3) Check Jumper pin of SW1 is short, between intermediate-terminal and OFF-side terminal.
- (4) Connect positive-terminal of power-supply to VIN+terminal and negative-terminal to GND-terminal with a pair of wires.
- (5) Connect load's positive-terminal to VOUT+terminal and negative-terminal to GND-terminal with a pair of wires.
- (6) Connect positive-terminal of DC voltmeter 1 to TP1 and negative-terminal to TP2 for input-voltage measurement.

(7) Connect positive-terminal of DC voltmeter 2 to TP3 and negative-terminal to TP4 for output-voltage measurement.

- (8) DC power-supply output is turned ON.
- (9) IC is enable (EN) by shorting Jumper-pin of SW1 between intermediate-terminal and ON-side terminal.
- (10) Check DC voltmeter 2 displays 5.0V.
- (11) The load is enabled.

(12) Check at DC voltmeter 1 whether the voltage-drop (loss) is not caused by the wire's resistance.

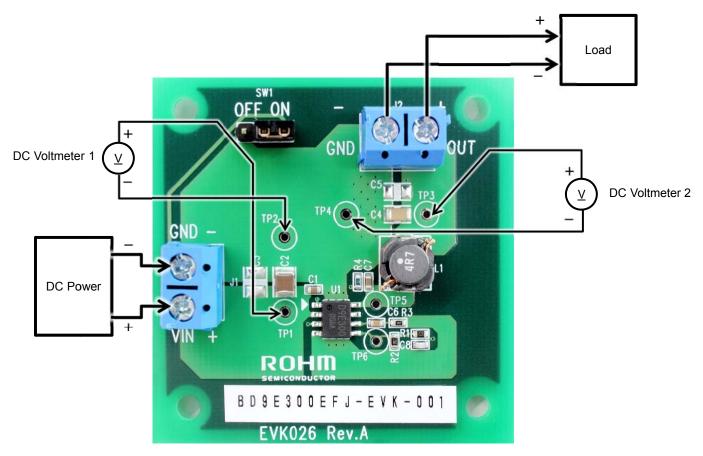


Figure 1. Connection Diagram

Enable-Pin

To minimize current consumption during standby-mode and normal operation, Enable-mode can be switched by controlling EN pin(3pin) of the IC. Standby-mode is enabled by shorting Jumper-pin of SW1 between intermediate-terminal and OFF-side terminal and normal-mode operation by shorting between intermediate-terminal and ON-side terminal. It also can be swithed between standby-mode and normal-mode operation by removing Jumper-pin and controlling the

voltage between EN and GND-terminal. Standby-mode is enabled when the voltage of EN is under 0.8V, and normal-mode operation when it is over 2.5V.

Cricuit Diagram

 V_{IN} = 7.2V to 33V, V_{OUT} = 5.0V

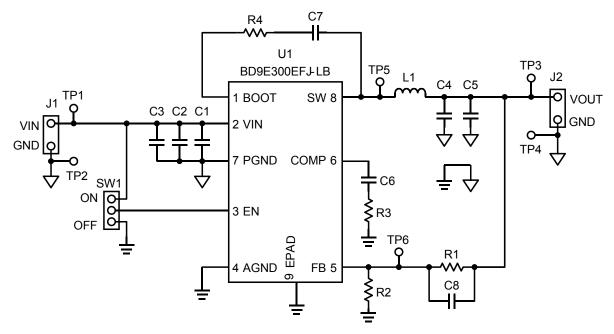


Figure 2. BD9E300EFJ-EVK-001 Circuit Diagram

Bill of Materials

| Count | Reference Designator | Туре | Value | Description | Manufacturer Part Number | Manufacturer | Configuration (mm) |
|-------|-------------------------|-------------------|--------|------------------------------|-----------------------------|-------------------------------------|-----------------------|
| 2 | C1, C7 | Ceramic Capacitor | 0.1µF | 50V, B, ±20% | GRM188B31H104MA92 | MURATA | 1608 |
| 1 | C2 | Ceramic Capacitor | 10µF | 50V, B, ±10% | GRM32EB31H106KA12 | MURATA | 3225 |
| 0 | C3 | Ceramic Capacitor | - | Not installed | - | - | 3225 |
| 1 | C4 | Ceramic Capacitor | 22µF | 10V, B, ±10% | GRM31CB31A226KE19 | MURATA | 3216 |
| 0 | C5 | Ceramic Capacitor | - | Not installed | - | - | 3216 |
| 1 | C6 | Ceramic Capacitor | 2200pF | 50V, B, ±10% | GRM188B11H222KA01 | MURATA | 1608 |
| 1 | C8 | Ceramic Capacitor | 100pF | 50V, CH, ±5% | GRM1882C1H101JA01 | MURATA | 1608 |
| 1 | L1 | Inductor | 4.7µH | ±30%, DCR=26mΩmax, 4.1A | CLF7045T-4R7N | TDK | 7269 |
| 1 | R1 | Resistor | 12kΩ | 1/10W, 50V, 1% | MCR03ERPF1202 | ROHM | 1608 |
| 1 | R2 | Resistor | 3kΩ | 1/10W, 50V, 1% | MCR03ERPF3001 | ROHM | 1608 |
| 1 | R3 | Resistor | 15kΩ | 1/10W, 50V, 1% | MCR03ERPF1502 | ROHM | 1608 |
| 1 | R4 | Resistor | 0Ω | Jumper | MCR03ERPJ000 | ROHM | 1608 |
| 1 | SW1 | Pin header | - | 2.54mm × 3 contacts | PH-1x03SG | USECONN | - |
| 1 | U1 | IC | - | Buck DC/DC Converter | BD9E300EFJ-LB | ROHM | HTSOP-J8 |
| 2 | J1, J2 | Terminal Block | - | 2 contacts, 15A, 14 to 22AWG | TB111-2-2-U-1-1 | Alphaplus Connectors & Cables | - |
| 1 | - | Jumper | - | Jumper pin for SW1 | MJ254-6BK | USECONN | - |

Layout

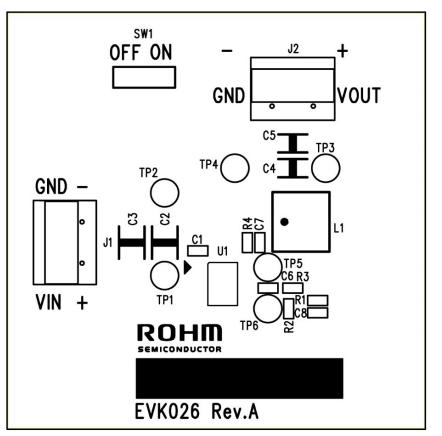


Figure 3. Top Silk Screen (Top view)

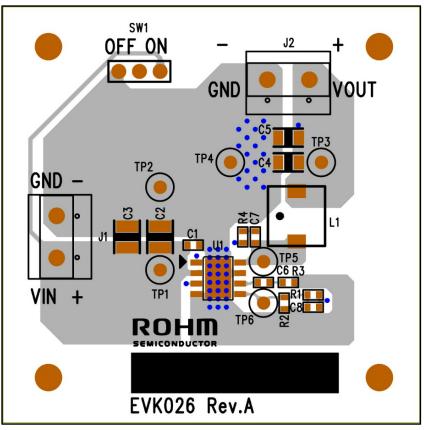


Figure 4. Top Silk Screen and Layout (Top view)

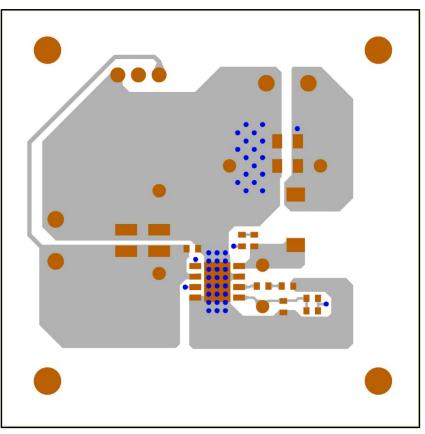
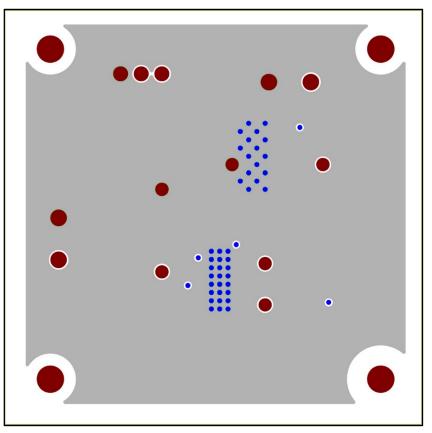



Figure 5. Top Side Layout (Top view)





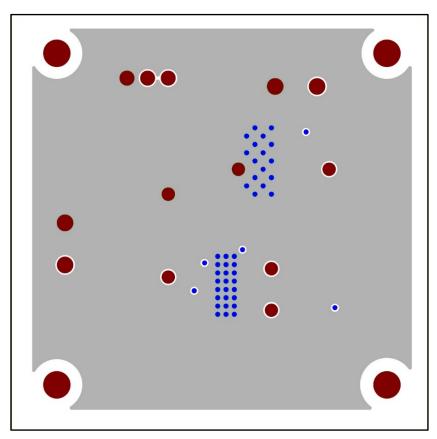


Figure 7. L3 Layout (Top view)

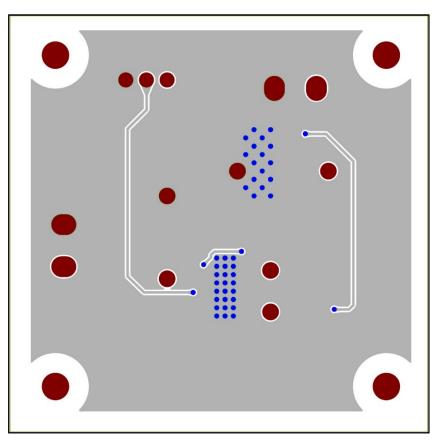


Figure 8. Bottom Side Layout (Top view)

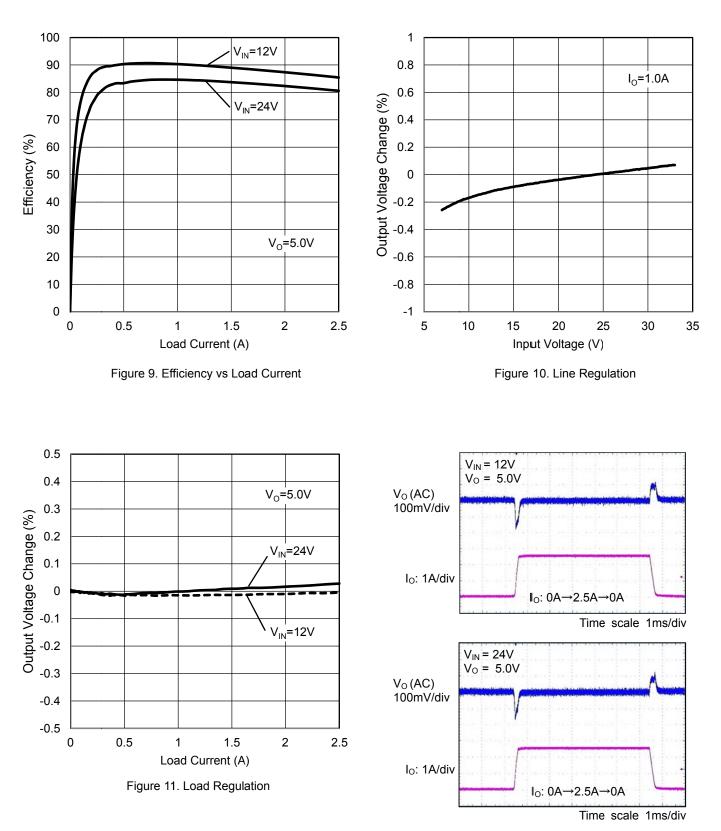


Figure 12. Load Transient Characteristics

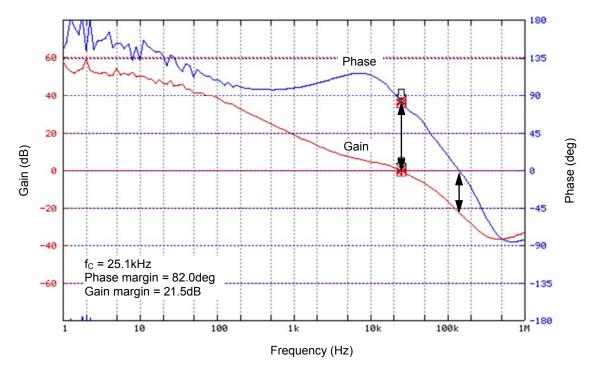


Figure 13. Loop Response V_{IN} = 12V, V_O = 5.0V, I_O = 2.5A

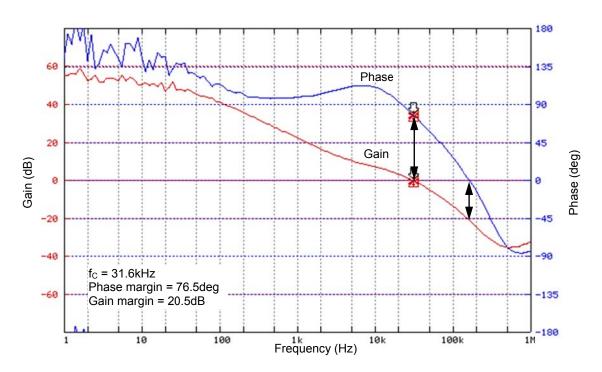


Figure 14. Loop Response V_{IN} = 24V, V_O = 5.0V, I_O = 2.5A

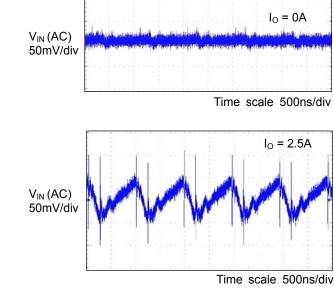


Figure 16. Input Voltage Ripple Wave $V_{\rm IN}$ = 12V, $V_{\rm O}$ = 5.0V





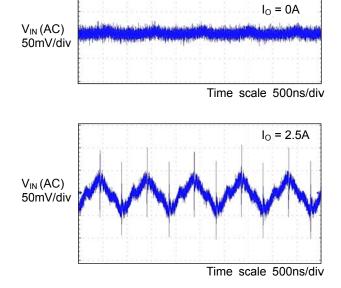



Figure 15. Input Voltage Ripple Wave V_{IN} = 12V, V_O = 5.0V

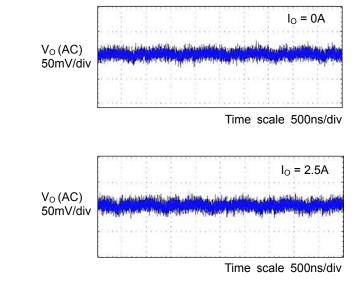



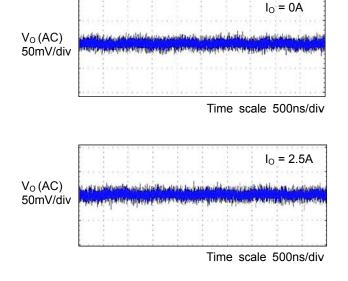



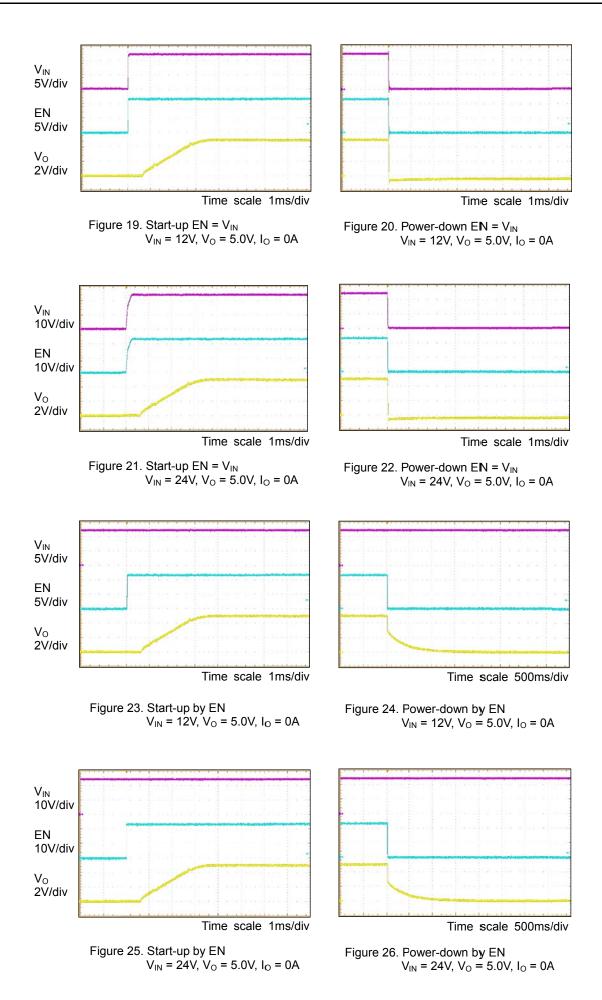

| | Notes |
|-----|--|
| 1) | The information contained herein is subject to change without notice. |
| 2) | Before you use our Products, please contact our sales representative and verify the latest specifica- tions : |
| 3) | Although ROHM is continuously working to improve product reliability and quality, semicon- ductors can break down and malfunction due to various factors. Therefore, in order to prevent personal injury or fire arising from failure, please take safety measures such as complying with the derating characteristics, implementing redundant and fire prevention designs, and utilizing backups and fail-safe procedures. ROHM shall have no responsibility for any damages arising out of the use of our Poducts beyond the rating specified by ROHM. |
| 4) | Examples of application circuits, circuit constants and any other information contained herein are provided only to illustrate the standard usage and operations of the Products. The periphera conditions must be taken into account when designing circuits for mass production. |
| 5) | The technical information specified herein is intended only to show the typical functions of and examples of application circuits for the Products. ROHM does not grant you, explicitly or implicitly any license to use or exercise intellectual property or other rights held by ROHM or any other parties. ROHM shall have no responsibility whatsoever for any dispute arising out of the use or such technical information. |
| 6) | The Products are intended for use in general electronic equipment (i.e. AV/OA devices, communication, consumer systems, gaming/entertainment sets) as well as the applications indicated in this document. |
| 7) | The Products specified in this document are not designed to be radiation tolerant. |
| 8) | For use of our Products in applications requiring a high degree of reliability (as exemplified below), please contact and consult with a ROHM representative : transportation equipment (i.e. cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, safety equipment, medical systems, servers, solar cells, and power transmission systems. |
| 9) | Do not use our Products in applications requiring extremely high reliability, such as aerospace equipment, nuclear power control systems, and submarine repeaters. |
| 10) | ROHM shall have no responsibility for any damages or injury arising from non-compliance with the recommended usage conditions and specifications contained herein. |
| 11) | ROHM has used reasonable care to ensur the accuracy of the information contained in this document. However, ROHM does not warrants that such information is error-free, and ROHM shall have no responsibility for any damages arising from any inaccuracy or misprint of such information. |
| 12) | Please use the Products in accordance with any applicable environmental laws and regulations such as the RoHS Directive. For more details, including RoHS compatibility, please contact a ROHM sales office. ROHM shall have no responsibility for any damages or losses resulting non-compliance with any applicable laws or regulations. |
| 13) | When providing our Products and technologies contained in this document to other countries you must abide by the procedures and provisions stipulated in all applicable export laws and regulations, including without limitation the US Export Administration Regulations and the Foreign Exchange and Foreign Trade Act. |
| 14) | This document, in part or in whole, may not be reprinted or reproduced without prior consent o ROHM. |



Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact us.

ROHM Customer Support System

http://www.rohm.com/contact/